

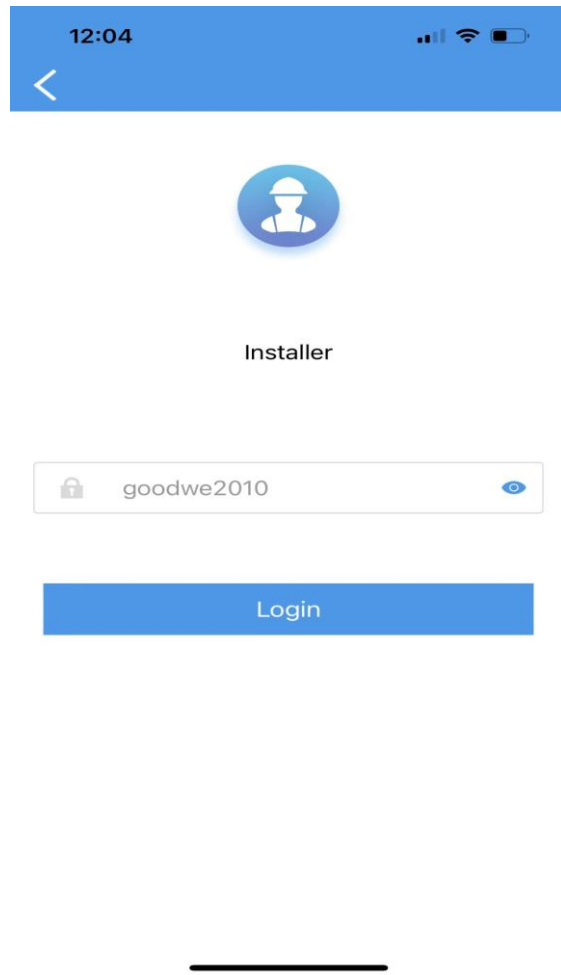


Goodwe Storage Inverter Back Up Enable

The Goodwe hybrid inverter back up may not be enabled automatically under the black out scenario with the back up overloading happened. If this happened, customer needs to turn the big loads connected to back up terminal on inverter off firstly, then follow this guide to enable back up function again.

Customer needs to download the APP called as PV master from apple or android store. Then connect mobile to inverter wifi directly (name of wifi is solar-wifi XXXXX which is last digitals of inverter serial number, the password of wifi is 12345678). Then turn the PV master app on and following steps below for enabling the inverter back up function.

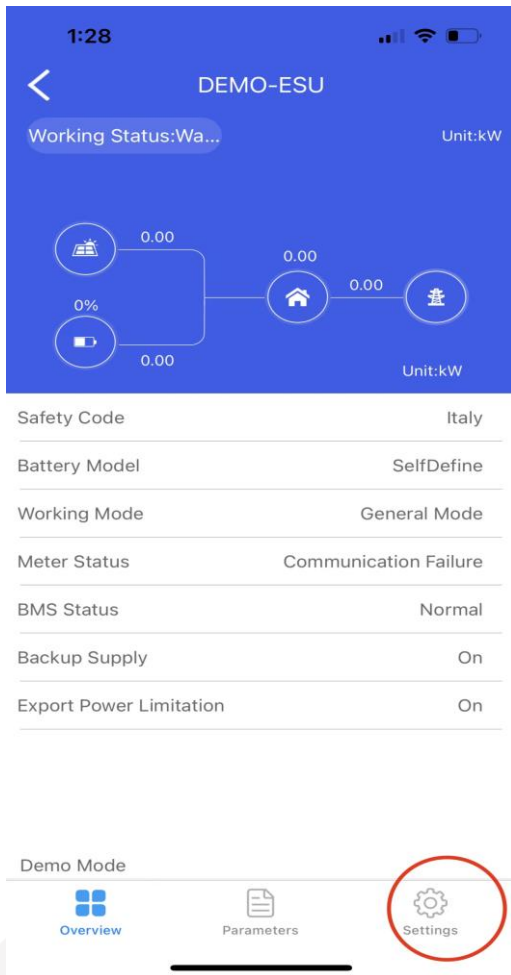

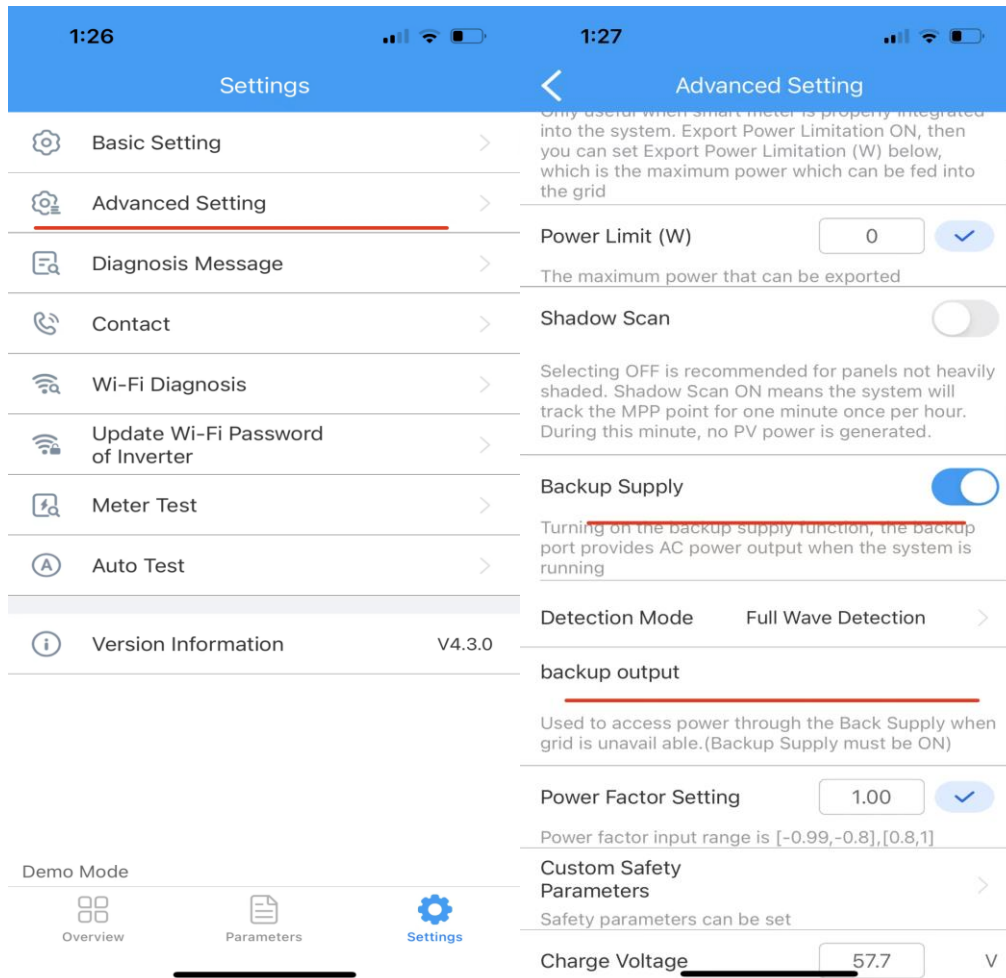

Customer turns the back up supply on as well as the backup output on (the on/off button only appear when no grid connected). Then wait for 1mins, the back up function shall be enabled automatically.

Goodwe Australia Pty Ltd
 Jiangsu GoodWe Power Supply Technology Co., Ltd